



EMAIL: FILTRATION@JOHNBROOKS.CA



HMWB Series Filter Cartridges

*Pleated Polyethersulfone (PES) Membrane for
Critical Filtration in Beverage Applications*

Protect your beverage from spoilage. HMWB Series Filter Cartridges utilize a special polyethersulfone membrane to provide consistent removal of spoilage organisms and inorganic particulate. The product offers excellent retention efficiency and extended on-stream life making it an ideal filter for the clarification of beer, wine and bottled water. PES membrane available with 0.2, 0.45 and 0.65 μm pore sizes, is designed to meet and surpass the filtration criteria necessary to maintain product quality and characteristics. Produced in an ISO Class 7 cleanroom, the cartridges are integrity tested during production to assure performance and consistency.

Product Specifications

Media: Asymmetric

Polyethersulfone Membrane

Inner core, end caps, cage: Polypropylene

Support layers: Spunbonded Polypropylene

Gaskets/O-Rings:

Buna-N, EPDM, Silicone, Teflon Encapsulated
Viton (O-Rings only), Viton

Micron ratings: 0.2, 0.45, 0.65 μm

Dimensions

Nominal lengths:

9.75" 10" 20" 30" 40"
24.8 25.4 50.8 76.2 101.6 cm

Outside diameter: 2.7" (6.9 cm)

Inside diameter: 1.0" (2.54 cm)

Surface area: 7.6 ft² (0.7 m²) per 10" element

Operating Parameters

Maximum sustained

operating temperature:

176°F (80°C) at 20 psid (1.38 bar)

Maximum differential pressure:

80 psid @ 70°F (4.14 bar @ 21°C)


40 psid @ 160°F (2.8 bar @ 71°C)

Maximum reverse differential pressure:

40 psid @ 70°F (2.8 bar @ 21°C)

Recommended change-out pressure:

35 psid (2.4 bar)

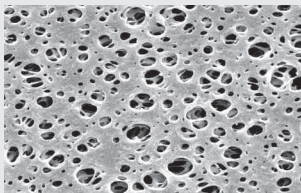

FEATURES & BENEFITS

- Manufactured in an ISO Class 7 Cleanroom Environment
- 100% flushed with ultrapure DI water and integrity tested
- Low adsorption of protein, color and flavor components
- Steamable/sanitizable for cleaning and reuse
- High log reduction values for spoilage organisms
- PES membrane provides high capacity contaminant loading
- Complete qualification guide available
- Quick wet treatment available

CERTIFICATIONS

- USP Class VI: Meets USP Class VI Biological Test for Plastics
- FDA Listed Materials: All materials comply with FDA Title 21 of the Code of Federal Regulations Sections 174.5, 177.1520, and 177.2440 as applicable for food and beverage contact.
- European Directive for Food Contact: European Regulation No. 1935/2004 and European Regulation 10/2011: Tested for migration behavior and is suitable for contact with all kinds of foodstuffs with minimal rinse-up. Data available upon request.

TYPICAL APPLICATIONS

- White Wine
- Sparkling Wine
- Champagne
- Bottled Water
- Red Wine
- Wine/Malt Coolers
- Distilled Spirits
- Beer

PERFORMANCE SPECIFICATIONS

- Hot DI Water: Filter cartridge will withstand temperatures of 185°F (85°C) for up to 30 consecutive minutes.
- Cleaning/Sanitization: Compatible with most common chemical cleaning, sanitizing and sterilizing agents and with pH range from 1–14. Consult factory for specific compatibility information.
- Steam/Autoclave: Cartridges may be steamed or autoclaved for at least 50 thirty-minute cycles @ 275°F (135°C).


HMWB NOMENCLATURE INFORMATION

Filter Type	Retention Rating (microns)	Nominal Length (inches)		End Configuration		Gasket or O-Ring		Options	
HMWB Series	0.2	-5	-20	P	Double Open End	B	Buna-N	-QW	Quick Wet Treatment
	0.45	-9.75*	-30	P2	226/Flat Single Open End	E	EPDM		
	0.65	-10	-40	P3	222/Flat Single Open End	S	Silicone		
				P7	226/Fin Single Open End	T	Teflon encap. Viton (O-Rings only)		
				P8	222/Fin Single Open End	V	Viton		
				AM	Single Open End, Internal O-Ring				
Example: HMWB 0.45-20P2E-QW									
HMWB	0.45	-20		P2		E		-QW	

*Available only for DOE (P) configuration

HMWB FLOW RATE

Typical Flow Rate Clean Water at Ambient Temperature (per 10" cartridge)

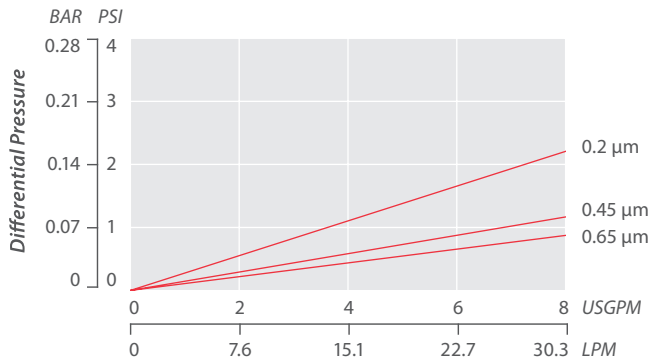

For liquids other than water, multiply pressure drop by the fluid viscosity in centipoise

TYPICAL BACTERIAL RETENTION

0.2 µm	LRV for <i>Pseudomonas aeruginosa</i> ≥ 11
0.45 µm	LRV for <i>Lactobacillus brevis</i> ≥ 7.6 LRV for <i>Oenococcus oeni</i> ≥ 10.0
0.65 µm	LRV for <i>S. cerevisiae</i> ≥ 8.7

INTEGRITY TEST SPECIFICATIONS

Minimum Bubble Point values and maximum Diffusive Air Flow (per 10-inch cartridge) values for HMWB filters wet with water:

Pore Size	Bubble Point	Diffusive Air Flow
0.2 µm	≥ 26 psig (2.1 bar)	≤ 35 cc/min @ 21 psig (1.7 bar)
0.45 µm	≥ 20 psig (1.4 bar)	35 cc/min @ 16 psig (1.1 bar)
0.65 µm	≥ 17 psig (1.2 bar)	≤ 35 cc/min @ 14 psig (1.0 bar)



**SPRAYING
PUMPING
FILTERING
AND VALVES**

1-877-624-5757
www.johnbrooks.ca